



Valve Size	Required Actuator Range	Individual Part Order Code* (If ordered with the below order codes, Easytork will ship each part as standalone)				2017 List Price				Complete Actuator to Valve Order Code*	
		Actuator	Insert	Extended Shaft	Bracket	Actuator +	Insert +	Extended Shaft +	Bracket or Plate +	= Total Package: Actuator and hardware for mounting to valve	
1/4"	EVA-0309	C-A-1-11-1-111	D-112-0.370x0.256in	K-AS-1-1-1-2	#VALUE!						AT.83.1/4".0309.16
	EVA-0309	C-A-1-11-1-111	D-112-0.370x0.256in	K-AS-1-1-1-2	#VALUE!						AT.83.1/4".0309.16
3/8"	EVA-0309	C-A-1-11-1-111	D-112-0.370x0.256in	K-AS-1-1-1-2	#VALUE!						AT.83.3/8".0309.16
	EVA-0309	C-A-1-11-1-111	D-112-0.370x0.256in	K-AS-1-1-1-2	#VALUE!						AT.83.3/8".0309.16
1/2"	EVA-0309	C-A-1-11-1-111	D-112-0.370x0.256in	K-AS-1-1-1-2	B-2-F03S-F04S-1.38in						AT.83.1/2".0309.16
	EVA-0309	C-A-1-11-1-111	D-112-0.370x0.256in	K-AS-1-1-1-2	B-2-F03S-F04S-1.38in						AT.83.1/2".0309.16
3/4"	EVA-0309	C-A-1-11-1-111	D-112-0.370x0.256in	K-AS-1-1-1-2	B-2-F03S-F04S-1.39in						AT.83.3/4".0309.16
	EVA-0411	C-A-2-11-1-111	D-212-0.370x0.256in	K-AS-2-1-1-2	B-2-F03S-F04S-1.39in						AT.83.3/4".0411.16
1"	EVA-0309	C-A-1-11-1-111	D-112-0.440x0.315in	K-AS-1-1-1-2	B-2-F04S-F04S-1.57in						AT.83.1".0309.16
	EVA-0411	C-A-2-11-1-111	D-212-0.440x0.315in	K-AS-2-1-1-2	B-2-F04S-F04S-1.57in						AT.83.1".0411.16
1 1/4"	EVA-0411	C-A-2-11-1-111	D-212-0.440x0.315in	K-AS-2-1-1-2	B-2-F04S-F04S-1.61in						AT.83.1 1/4".0411.16
	EVA-0514	C-A-3-11-1-111	D-312-0.440x0.315in	K-AS-3-1-1-2	B-2-F04M-F05M-2.11in						AT.83.1 1/4".0514.16
1 1/2"	EVA-0411	C-A-2-11-1-111	D-212-0.560x0.382in	K-AS-2-1-1-2	B-2-F05S-F04S-1.76in						AT.83.1 1/2".0411.16
	EVA-0514	C-A-3-11-1-111	D-312-0.560x0.382in	K-AS-3-1-1-2	B-2-F05M-F05M-2.26in						AT.83.1 1/2".0514.16
2"	EVA-0514	C-A-3-11-1-111	D-312-0.560x0.382in	K-AS-3-1-1-2	B-2-F05M-F05M-2.07in						AT.83.2".0514.16
	EVA-0717	C-A-4-11-1-111	D-412-0.560x0.382in	K-AS-4-1-1-2	B-2-F05M-F07M-2.07in						AT.83.2".0717.16

Easytork will ship the actuator, insert, extended shaft, and bracket unassembled in one SKU box.

Refer to [Assembly & Labor tab](#) if buyer wants Easytork to assemble items together.

**Disclaimer:** Based on information available from valve manufacturer. All dimensions to be verified by customer prior to purchase confirmation.

**Note\*:** Only for actuator and hardware required for mounting to valve. Order auxiliary add-ons (e.g., solenoid valve, lockout & PST, limit switch, chemical resistant adder, etc.) separately. If buyer requires assembly of auxiliary add-ons and/or valve, labor will be charged separately.