Actuator Design Year 16

ersion: [x

Generic Input			Easytork internal use only				
Valve Brand	Apollo	Valve Brand Truncate	AP				
Series	86R-200	Series Truncate	86R-200				
Input: 1 = mm / 2 = in	2						
Cafata Fastes	050/						

Valve Input

		Section Only For Non Direct Mount ("D.M"), Otherwise Leave Blank							t	Valve Dimension							
	Direct Mount						Buyer			Valve							
	Valve Torque Check		Check	Brack	et Check	Extended Shaft Check		Preference	Valve Info	Valve Flange	Dimension			Valve Stem	Shape and Di	mension	
	Published valve torque	Incl. safety factor	Any obstruction over flange?	Possible obstruction for std. Easytork bracket?	Out. dia. of obstruction over flange surface	Are bolts for packing gland close to valve stem height?	If bolts interfere with valve stem, what is inside dia. between bolts		If known, capturable valve stem height	In ISO (i.e. F05) or in	Flange to top of valve stem	2 = Double D	in or mm	V Sq - sq DD - bore b+k - bore	V1 Sq - sq DD - flat b+k - key	V2 b+k - key (leave blank if Sq	Insert orientation when valve is CLOSED. If Sq 1=diamond / 2=square If DD or B+K 1=in line / 2=not in line
Valve												3 = Bore +	either			or DD)	1 = Diamond or in line /
Size	in-lb	in-lb	1=Yes / 0=No	1=Yes / 0=No	in/mm	1=Yes / 0=No	in/mm	in/mm	in/mm	in/mm	in/mm	Key	in / mm	in/mm	in/mm	in/mm	2=Square or not in line
3	" 1,030	0 0 1,288 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Yes	Yes					0.50	4.02	1.69	2	in	1.250	0.726	5	
Notes:			le. Gland, capi, etc		If not known, leave blank	Close & Interferes Far & No interference	If not known, leave blank		If not known, leave blank	If not known, leave blank	If info not available, then NA	If not known, leave blank	If info not available, then NA	If info not available, then NA	If info not available, then NA	Butte examp	When Valve Is CLOSED Is valve stem: If y valve as le in pipeline amond = 1 Square = 2 in line = 1 DD not in line = 2 in line = 1 Key not in line = 2

Disclaimer: Based on information available from valve manufacturer. All dimensions to be verified by customer prior to purchase confirmation.

Version: I:

		(Act		ator Torque ditional saftey factor	or included)	Individual Part Order Code* (If ordered with the below order codes, Easytork will ship each part as standalone)						List Price	Complete Actuator to Valve Order Code*			
Valve Size	Required Actuator Range		DA @ 80PSI	FS @ 60PSI	FS @ 80PSI	Actuator	Insert	Extended Shaft	Bracket	Actuator +	Insert +	Extended Shaft +	Bracket or Plate +	= Total Package: Actuator and hardware for mounting to valve	extended s one SKU b Refer to A	ill ship the actuator, insert, haft, and bracket unassembled in ox. ssembly & Labor tab if buyer dork to assemble items together.
3"	EVA-102 EVA-102		3,051 3,051	1,488 1,488	1,983 1,983	C-A-5-11-1-111 C-A-5-11-1-111	D-512-1.250x0.725in D-512-1.250x0.725in	K-AS-5-1-1-2 K-AS-5-1-1-2	B-2-F10L-O-F10L-2.94in B-2-F10L-O-F10L-2.94in							AP.86R-200.3".1022.16 AP.86R-200.3".1022.16

Disclaimer: Based on information available from valve manufacturer. All dimensions to be verified by customer prior to purchase confirmation.

Note*: Only for actuator and hardware required for mounting to valve. Order auxiliary add-ons (e.g., solenoid valve, lockout & PST, limit switch, chemical resistant adder, etc.) separately. If buyer requires assembly of auxiliary add-ons and/or valve, labor will be charged separately.