

Valve Size	Required Actuator Range	Individual Part Order Code*				List Price					Complete Actuator to Valve Order Code*	
		Actuator	Insert	Extended Shaft	Bracket	Actuator +	Insert +	Extended Shaft +	Bracket or Plate +	= Total Package: Actuator and hardware for mounting to valve		
3"	EVA-1022	C-A-5-11-1-111	D-512-1.250x0.725in	K-AS-5-1-1-2	B-2-F10L.O-F10L-2.94in							AP.86R-200.3".1022.16
	EVA-1022	C-A-5-11-1-111	D-512-1.250x0.725in	K-AS-5-1-1-2	B-2-F10L.O-F10L-2.94in							AP.86R-200.3".1022.16

Easytork will ship the actuator, insert, extended shaft, and bracket unassembled in one SKU box.

Refer to [Assembly & Labor tab](#) if buyer wants Easytork to assemble items together.

Disclaimer: Based on information available from valve manufacturer. All dimensions to be verified by customer prior to purchase confirmation.

Note*: Only for actuator and hardware required for mounting to valve. Order auxiliary add-ons (e.g., solenoid valve, lockout & PST, limit switch, chemical resistant adder, etc.) separately. If buyer requires assembly of auxiliary add-ons and/or valve, labor will be charged separately.