

Valve Size	Required Actuator Range	Actuator Torque				Individual Part Order Code* (If ordered with the below order codes, Easytork will ship each part as standalone)				2017 List Price					Complete Actuator to Valve Order Code*	
		DA @ 60PSI	DA @ 80PSI	FS @ 60PSI	FS @ 80PSI	Actuator	Insert	Extended Shaft	Bracket	Actuator +	Insert +	Extended Shaft +	Bracket or Plate +	= Total Package: Actuator and hardware for mounting to valve		
1/2"	EVA-0309	146	195	95	127	C-A-1-11-1-111										JF.DM2500 150#.1/2".0309.16
	EVA-0309	146	195	95	127	C-A-1-11-1-111										JF.DM2500 150#.1/2".0309.16
3/4"	EVA-0309	146	195	95	127	C-A-1-11-1-111										JF.DM2500 150#.3/4".0309.16
	EVA-0411	288	384	187	250	C-A-2-11-1-111	D-211-9.00x9.00mm									JF.DM2500 150#.3/4".0411.16
1"	EVA-0411	288	384	187	250	C-A-2-11-1-111										JF.DM2500 150#.1".0411.16
	EVA-0411	288	384	187	250	C-A-2-11-1-111										JF.DM2500 150#.1".0411.16
1 1/4"	EVA-0411	288	384	187	250	C-A-2-11-1-111										JF.DM2500 150#.1 1/4".0411.16
	EVA-0514	572	763	372	496	C-A-3-11-1-111	D-311-11.00x11.00mm									JF.DM2500 150#.1 1/4".0514.16
1 1/2"	EVA-0514	572	763	372	496	C-A-3-11-1-111										JF.DM2500 150#.1 1/2".0514.16
	EVA-0514	572	763	372	496	C-A-3-11-1-111										JF.DM2500 150#.1 1/2".0514.16
2"	EVA-0514	572	763	372	496	C-A-3-11-1-111										JF.DM2500 150#.2".0514.16
	EVA-0717	1,144	1,526	744	992	C-A-4-11-1-111	D-411-14.00x14.00mm									JF.DM2500 150#.2".0717.16
2 1/2"	EVA-0717	1,144	1,526	744	992	C-A-4-11-1-111										JF.DM2500 150#.2 1/2".0717.16
	EVA-1022	2,289	3,051	1,488	1,983	C-A-5-11-1-111	D-511-17.00x17.00mm									JF.DM2500 150#.2 1/2".1022.16
3"	EVA-0717	1,144	1,526	744	992	C-A-4-11-1-111										JF.DM2500 150#.3".0717.16
	EVA-1022	2,289	3,051	1,488	1,983	C-A-5-11-1-111	D-511-17.00x17.00mm									JF.DM2500 150#.3".1022.16
4"	EVA-1022	2,289	3,051	1,488	1,983	C-A-5-11-1-111										JF.DM2500 150#.4".1022.16
	EVA-1227	4,577	6,103	2,975	3,967	C-A-6-11-1-111	D-611-22.00x22.00mm									JF.DM2500 150#.4".1227.16

Easytork will ship the actuator, insert, extended shaft, and bracket unassembled in one SKU box.

Refer to [Assembly & Labor](#) tab if buyer wants Easytork to assemble items together.

Disclaimer: Based on information available from valve manufacturer. All dimensions to be verified by customer prior to purchase confirmation.

Note*: Only for actuator and hardware required for mounting to valve. Order auxiliary add-ons (e.g., solenoid valve, lockout & PST, limit switch, chemical resistant adder, etc.) separately. If buyer requires assembly of auxiliary add-ons and/or valve, labor will be charged separately.