

Generic Input		Easytork internal use only	
Valve Brand	Marwin	Valve Brand Truncate	MW
Series	3L/T 2100F-F	Series Truncate	2100FF
Input: 1 = mm / 2 = in	2		
Safety Factor	25%		



Actuator Design Year

16

Valve Input

Direct Mount				Section Only For Non Direct Mount ("D.M"), Otherwise Leave Blank						Valve Dimension									
Valve Torque		Check		Bracket Check		Extended Shaft Check		Buyer Preference		Valve Info		Valve Flange		Valve Dimension		Valve Stem Shape and Dimension			Insert orientation when valve is CLOSED. If Sq 1=diamond / 2=square If DD or B+K 1=in line / 2=not in line 1 = Diamond or in line / 2=Square or not in line
Published valve torque	Incl. safety factor	Any obstruction over flange?	Possible obstruction for std. Easytork bracket?	Out. dia. of obstruction over flange surface	Are bolts for packing gland close to valve stem height?	If bolts interfere with valve stem, what is inside dia. between bolts	If w/ bracket: How much valve stem capture?	If known, capturable valve stem height	In ISO (i.e. F05)	Flange to top of valve stem	Stem Shape	Valve stem dimension in in or mm	V	V1	V2				
in-lb	in-lb	1=Yes / 0=No	1=Yes / 0=No	in/mm	1=Yes / 0=No	in/mm	in/mm	in/mm	in/mm	in/mm	Key	in / mm	in/mm	in/mm	in/mm				
1/2"	147	184	No							F03	0.43	1	in	0.350	0.350	1			
3/4"	177	221	No							F04	0.55	1	in	0.430	0.430	1			
1"	288	360	No							F04	0.55	1	in	0.430	0.430	1			
1 1/4"	398	498	No							F05	0.71	1	in	0.550	0.550	1			
1 1/2"	636	795	No							F07	0.71	1	in	0.550	0.550	1			
2"	826	1,033	No							F07	0.91	1	in	0.670	0.670	1			
2 1/2"	1,550	1,938	No							F10	0.98	1	in	0.870	0.870	1			
3"	1,698	2,123	No							F10	0.98	1	in	0.870	0.870	1			
4"	2,730	3,413	No					0.900	0.98	F10	0.98	1	in	0.870	0.870	1			
6"	5,603	7,004	Yes	Yes				2.000	2.40	F12	2.40	1	in	1.420	1.420	1			
0																			

Notes:

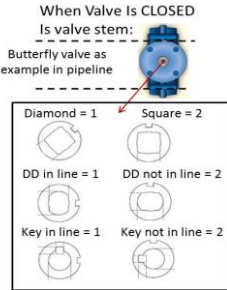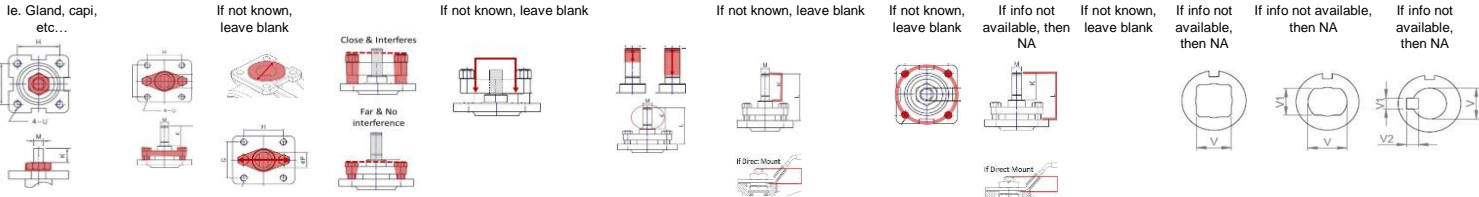

Disclaimer: Based on information available from valve manufacturer. All dimensions to be verified by customer prior to purchase confirmation.

Valve Size	Required Actuator Range	Individual Part Order Code* (If ordered with the below order codes, Easytork will ship each part as standalone)				2017 List Price				
		Actuator	Insert	Extended Shaft	Bracket	Actuator +	Insert +	Extended Shaft +	Bracket or Plate +	= Total Package: Actuator and hardware for mounting to valve
1/2"	EVA-0309	C-A-1-11-1-111								
	EVA-0411	C-A-2-11-1-111	D-211-0.350x0.350in							
3/4"	EVA-0411	C-A-2-11-1-111								
	EVA-0514	C-A-3-11-1-111	D-311-0.430x0.430in							
1"	EVA-0411	C-A-2-11-1-111								
	EVA-0514	C-A-3-11-1-111	D-311-0.430x0.430in							
1 1/4"	EVA-0514	C-A-3-11-1-111								
	EVA-0717	C-A-4-11-1-111	D-411-0.550x0.550in							
1 1/2"	EVA-0717	C-A-4-11-1-111	D-411-0.550x0.550in							
	EVA-1022	C-A-5-11-1-111	D-511-0.550x0.550in							
2"	EVA-0717	C-A-4-11-1-111								
	EVA-1022	C-A-5-11-1-111	D-511-0.670x0.670in							
2 1/2"	EVA-1022	C-A-5-11-1-111								
	EVA-1227	C-A-6-11-1-111	D-611-0.870x0.870in							
3"	EVA-1022	C-A-5-11-1-111								
	EVA-1227	C-A-6-11-1-111	D-611-0.870x0.870in							
4"	EVA-1227	C-A-6-11-1-111	D-611-0.870x0.870in							
	EVA-1436	C-A-7-11-1-111	D-711-0.870x0.870in	K-AS-7-1-1-2	B-2-F10L-F12L-2.08in					
6"	EVA-1227	C-A-6-11-1-111	D-611-1.420x1.420in	K-AS-6-1-1-2	#VALUE!					
	EVA-1436	C-A-7-11-1-111		K-AS-7-1-1-2	#VALUE!					

**Complete Actuator to Valve Order Code\***

Easytork will ship the actuator, insert, extended shaft, and bracket unassembled in one SKU box.

Refer to [Assembly & Labor tab](#) if buyer wants Easytork to assemble items together.

MW.2100FF.1/2".0309.16
MW.2100FF.1/2".0411.16
MW.2100FF.3/4".0411.16
MW.2100FF.3/4".0514.16
MW.2100FF.1".0411.16
MW.2100FF.1".0514.16
MW.2100FF.1 1/4".0514.16
MW.2100FF.1 1/4".0717.16
MW.2100FF.1 1/2".0717.16
MW.2100FF.1 1/2".1022.16
MW.2100FF.2".0717.16
MW.2100FF.2".1022.16
MW.2100FF.2 1/2".1022.16
MW.2100FF.2 1/2".1227.16
MW.2100FF.3".1022.16
MW.2100FF.3".1227.16
MW.2100FF.4".1227.16
MW.2100FF.4".1436.16
MW.2100FF.6".1227.16
MW.2100FF.6".1436.16

**Disclaimer: Based on information available from valve manufacturer. All dimensions to be verified by customer prior to purchase confirmation.**

**Note\*: Only for actuator and hardware required for mounting to valve. Order auxiliary add-ons (e.g., solenoid valve, lockout & PST, limit switch, chemical resistant adder, etc.) separately. If buyer requires assembly of auxiliary add-ons and/or valve, labor will be charged separately.**